

Air Leak	Parts	Causes	Remedies
<b>Air Cap Set (Fluid Nozzle)</b>	Air Valve Seat Set	Dirt on seat surface (inside)	Clean
		Wear or Damage on seat surface	Replace
		Broken (overtightened)	Replace
	Air Valve	Dirt on seat surface	Clean
		Damage on seat surface	Replace
	Air Valve Spring	Weak (lack of load)	Replace
		Missing	Replace
	O-ring on Air Valve Seat Set	Wear or Damage	Replace
		Missing	Replace
	Fluid Nozzle	Dirt on seat surface	Clean
	Damage on seat surface	Replace	
		Loose	Tighten
<b>Behind Trigger</b>	Packing inside Fluid Adj. Guide Set	Wear, Damage or Missing	Replace whole Fluid Adj. Guide Set (Packing itself is not replaceable)
	Air Valve	Dirt on seat surface	Clean
		Wear or Damage on seat surface	Replace
	Air Valve Shaft	Dirt on seat surface	Clean
		Wear or Damage on seat surface	Replace
	Packing inside Air Valve Seat Set	Wear or Damage	Replace whole Air Valve Seat Set (Packing itself is not replaceable)
Air Valve Seat Set	Dirt on seat surface (outside)	Clean	
	Loose	Tighten	

